


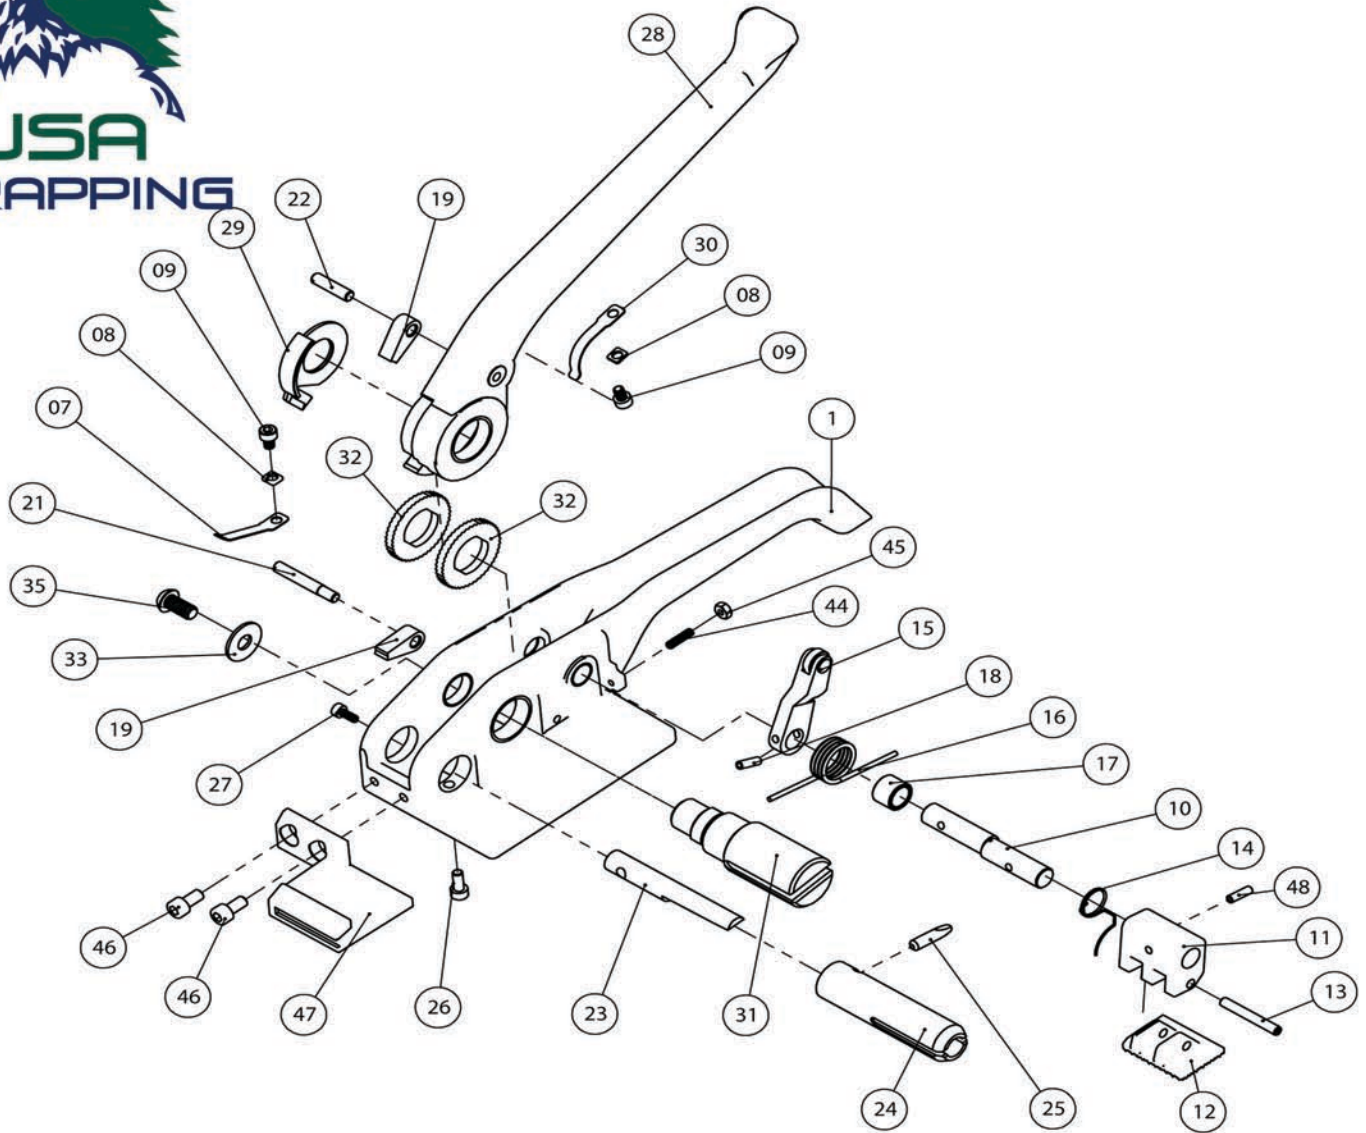

RB-475 Windlass Tensioner



Part No.	Part Name	Q'ty/Tool	Part No.	Part Name	Q'ty/Tool
01	Base	1	23	Cutter	1
07	Base Toggle Spring	1	24	Cutter Housing	1
08	Washer	2	25	Blade Lever	1
09	Screw M5x8	2	26	Cutter Housing Screw	1
10	Leg Shaft	1	27	Cutter Screw	1
11	Leg	1	28	Handle	1
12	Foot	1	29	Nose Hook	1
13	Foot Screw	1	30	Handle Spring	1
14	Spring	1	31	Windlass	1
15	Lever Release Assembly	1	32	Ratchet Wheel	2
16	Main Spring	1	33	Washer	1
17	Bushing	1	35	Screw	1
18	Pin 4x18	1	44	Screw M4x16	1
19	Toggle	2	45	Nut	1
21	Base Shaft	1	46	Screw M6x12	2
22	Handle Shaft	1	47	Nose	1
			48	Pin 4x14	1

RB-475 Schematic

Keep tool well oiled and clean. Please order parts by number and name.